



Recommended Fastening Patterns:


Tuff Rib Panel 36" coverage

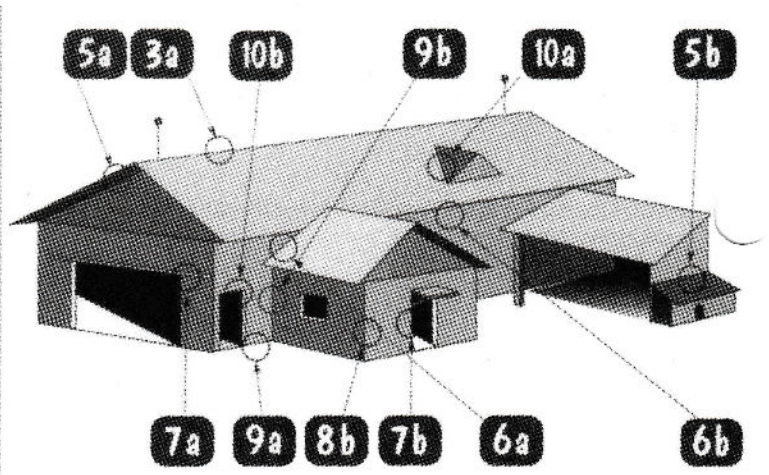

Buckeye Wave Panel 36" coverage




Ridge Cap 12" & 16"

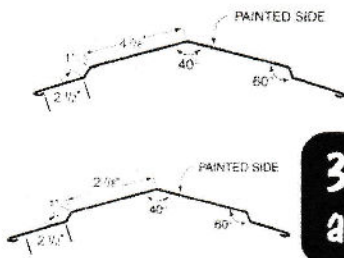


3 a

Rake Trim

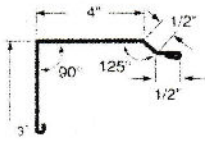


5 a

Door Track Cover

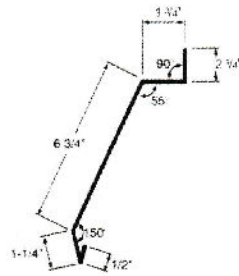


7 a

Rat Guard

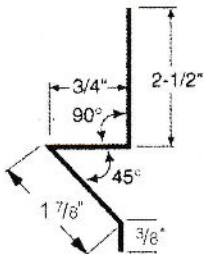


9 a

Overhead Door Trim

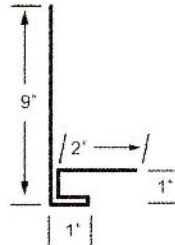


Endwall & Transition

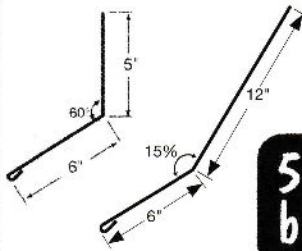


5 b

"J" Channel

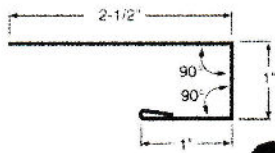


7 b

Inside Corner

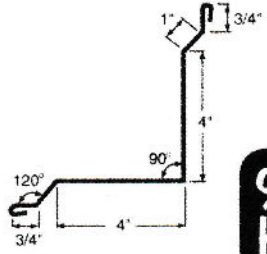


9 b

Ohio Sliding Door Jamb

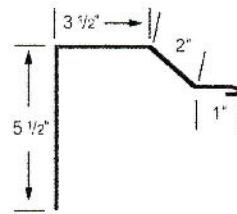


Sidewall

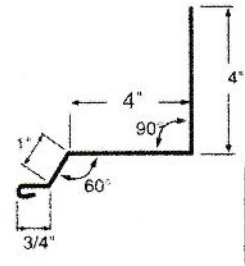


6 a

Large Outside Corner Residential Corner

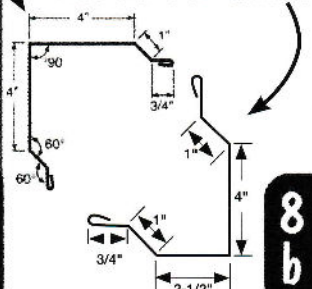


8 b

"W" Valley

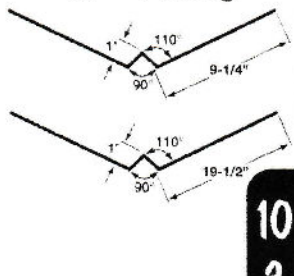


10 a

Z-Flashing

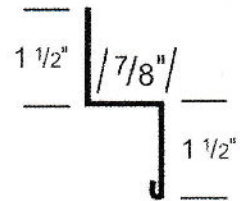


Eave Trim

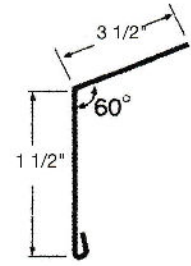


6 b

Snow Guard

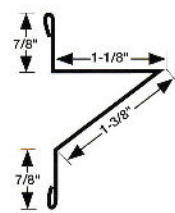

Base Angle

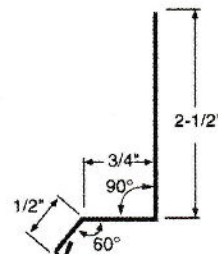

10 b